

Repkord

2 - Roller Assembly

Written By: Pooch



Step 1 — Prepping the Roller Panels




- Pic 1. Required parts for the rollers. Bearing Bag, Roller Hardware Bag, 16 roller panel set and 3 roller panel set punch-outs.
- Remove the roller panels from their punch-outs as shown in pic 2.
- You can see this step in the assembly video at the 40:38 timestamp.
<https://youtu.be/nZ5MGGcn6jw>

Step 2 — Assembling the Two End Rollers



- Do this twice for the rollers that go on each end of the box.

Step 3 — Finishing Up Outer Roller Assembly

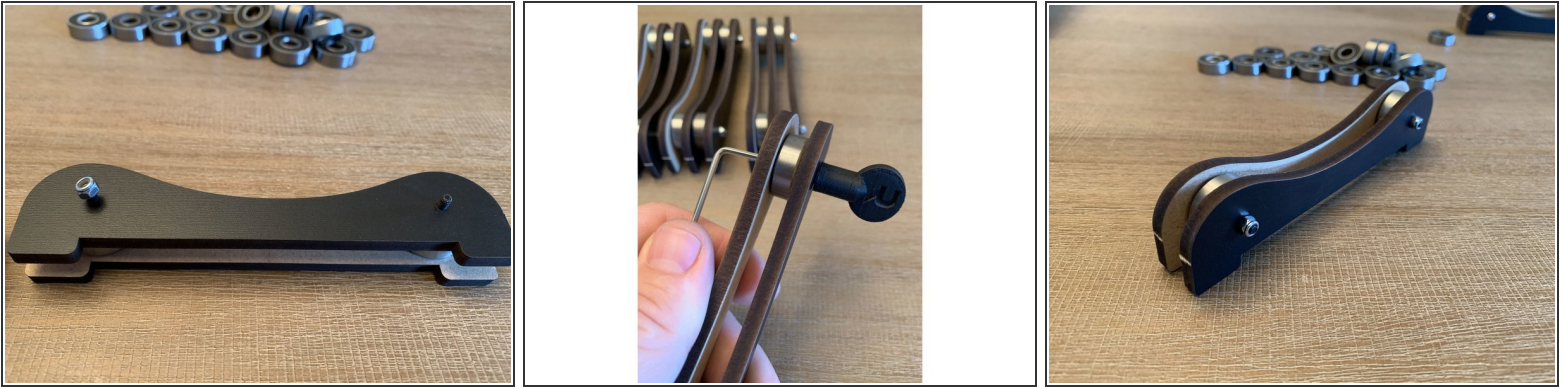

- Do this twice for the rollers that go on each end of the box.


Step 4 — Double Roller Assembly



- ① Double rollers go in the middle of the box and are shared by two adjacent spools.

- You will be building 5 of these.

Step 5 — Double Roller Assembly Continued

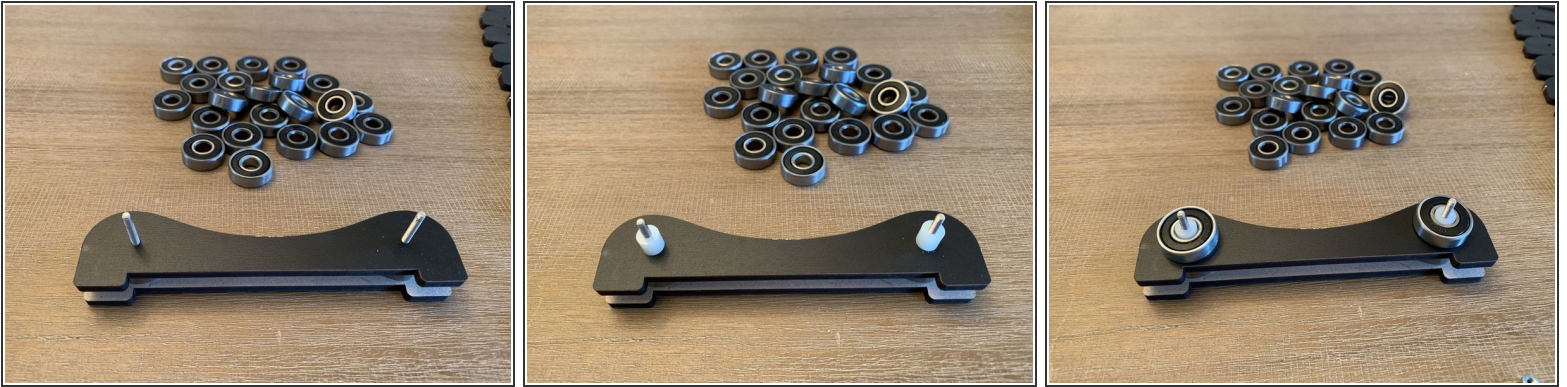


- Same process as the end rollers but with a second layer on top.

Step 6 — Finishing up the Double Roller Assembly



- Repeat 5x

Step 7 — Completed Roller Assembly

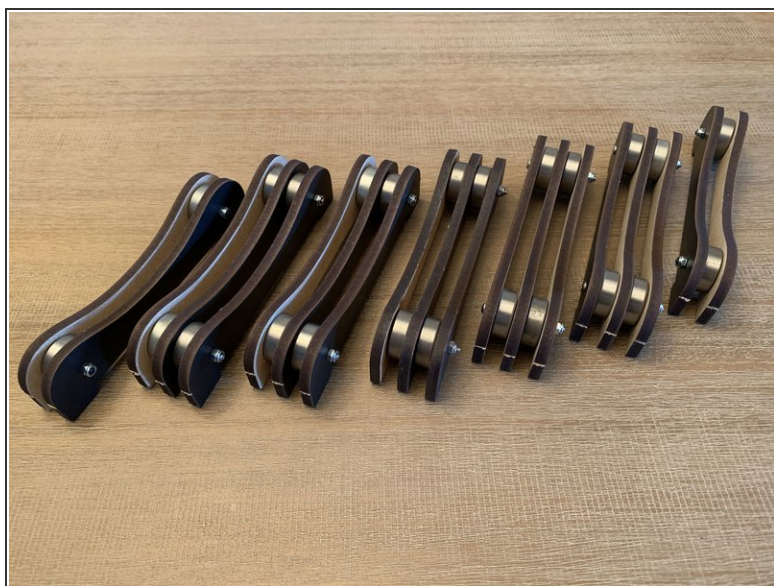

- Install in the box spaced out to fit the spools you're installing in the box.
- Done! If you have other options like the Seal Kit or Humidity Hunter kit. See the corresponding guides on the main menu.